



Pick-to-Light Placement Sensor Capacitive Sensor K70APT2YXDQ

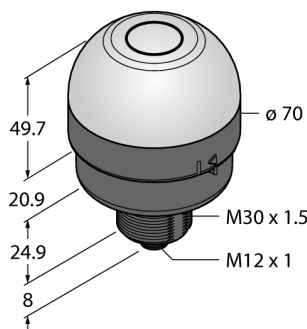

Type	K70APT2YXDQ
ID	3804099
Signal and display data	
Purpose	Pick-to-Light
Function	Touch Button
Light type	Yellow
LED service life (L70)	50000 h
Electrical data	
Operating voltage U_o	12...30 VDC
DC rated operating current I_o	≤ 150 mA
Output function	NO contact, PNP
Response time typical	< 50 ms
Mechanical data	
Design	Cylinder, threaded, K70
Dimensions	Ø 70 x 103.5 mm
Housing material	Plastic, PC
Window material	Plastic, diffuse
Electrical connection	Connector, M12 × 1
Ambient temperature	-40...+50 °C
Relative humidity	0...90%
Protection class	IP65
Tests/approvals	
Approvals	CE, cULus listed

- Protection class IP65
- M12 x 1 male connector, 4-pin
- Disabled: Yellow (COL 1)
- Enabled: No color
- Operating voltage 12...30 VDC
- PNP switching
- NO contact
- Capacitive sensor of the second generation
- High immunity to false actuation by splashing, detergents, oils and other contaminants

Wiring Diagram

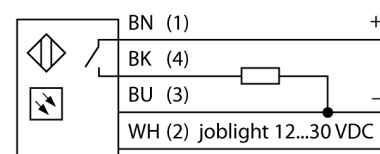

Functional principle

The K70 pick-and-place sensor is suitable for many mounting and component placement applications. The green work light or other signal lights are reflected perfectly by the entire dome (depending on the version). The transistor output can be easily connected to a system control, which is programmed for a special task sequence. The work light of the sensor is located in or next to every bin at the operator's workstation and indicates: 1. The bins with the components to be picked up for a particular work step and 2. the sequence in which the components have to be picked up. If the operator removes a part from the bin, the K50 detects the hand in the bin and sends

a signal to the control unit. The system then checks if the correct component has been picked up and – depending on the configuration – switches the corresponding work light off and the next one on, according to the assembly sequence. The work sequence control leads to increased efficiency, improved quality control and reduces rework and testing expenses.

The term **work light** therefore refers to the visual indicator of the bin from which a part should be removed next. The **actuation indicator** confirms the removal with a different color. The **mispick indicator** illuminates if a bin was reached into when the work light was not set.